

HOW TO USE GUIDE

www.travelthewild.co.uk

VAI2 FBK

CONTENTS

- Р3 Pч P5 P6 P7
- P8
- P9
- P10 Front Cab
- P11 Gas P12 Cabin Control Panel Waste Water (Greywater) **P13** Making Up Beds P14 Tool Kit P15 P16 Connecting To The Wifi P17 USB Charging Points

www.travelthewild C.0



NEL TH

PITCHING UP



Pitching Up

If pitching up on uneven ground, you will need to use the ramp to level off the motorhome, there is a spirit level in the tools cupboard to check the motorhome is even. If the van is uneven the fridge will not work

With Electric Hookup

The power box is located next to the motorhome door, there is an orange power cable located in the boot.

Without Electric - Using Solar Panels

There is a solar panel located on the roof of the motorhome – (more info needed once fitted)

Motorhome information/specifications

Model: Swift Escape 696 Reg No: VX12 FBX

Length: 22' 8" (6.92m) Height: 9'8" (2.94 m) Width: 7' 4" (2.24m) IGN: DE05294 IMM: 48618 RAD: 5264 Engine power: 23KW Type mass: 3,000kg Max Weight: 3,500kg Type of license required: B Driven in a normal license

Follow us on... 🔘 灯

RAC Breakdown Call : 0330 159 8714 Policy No: 26/BV/29296258/06 Policy Dated: 06/06/22- 06/06/23

WATER TANK



Water Tank

When you arrive on site, fill the water tank up. It will hold approx. 50 litres. The blue hose is located in the boot of the motorhome, connect to site water mains, fill up the tank with the cap located on the passenger side of the motorhome, 'labelled water'.

Turn key to the left then turn cap to the left to open. The water tank is located underneath the bench seating on the left side as you enter the motorhome. Unscrew the black cap to check when the water tank is full.



Follow us on... 🔘 灯

WASTE WATER (GREYWATER)



Waste Water (Greywater)

The motorhome has a waste water tank which will need emptying when full. The waste master unit can be used to drain the waste water and dispose on site at the correct area The internal control panel will beep when either fresh water tank is empty or waste tank is full.



Follow us on... 🔘 灯

FRIDGE



Follow us on... 🔘 灯

Fridge

The fridge can be powered by gas, electric hook up or battery.

The dial on the left hand side can be turned to select the night setting when driving.

Set fridge to battery, once pitched charge to gas or electric if you are on electric hook up

The small dots are for a colder fridge



Small dots: Colder Big dots: Warmer

TOILET



Follow us on... 🔘 灯



There is a cartridge under the main toilet unit, please add a small amount of water and blue chemical (150ml of each) The toilet must be closed before pulling out the cartridge and emptying.

Please DO NOT force this, it will need someone to go inside the bathroom to check the flap is closed so it can be removed freely.

The cartridge can be pulled by the extendable arm and wheels to the onsite chemical toilet by extending the arm and using the wheels.

Emptying The Toilet

- 1. Stand upright
- 2. Rotate the tube 90 degrees and unscrew lid

www.travelthewild.co.uk

- **3.** Empty inside the chemical toilet while pressing the orange button to release the pressure inside
- 4. Once emptied wash down with water to avoid odour

Please make sure you wash hands and use sanitiser after use

AWNING



Follow us on... (O) 灯

Putting Awning Out

There is a pole with a hook on the end located in the boot, to extend the awning out hook the end onto the back of the vehicle side, rotate round to extend the awning out.

Once out remove the legs, pull out to extend the legs by turning the knob, rotate the awning slightly to make tight.

Please peg the awning down and use the guide ropes and pegs to secure in place (these are located in the boot)

There is a ground mat in the boot that can be pegged down to avoid grass and mess getting into the motorhome.

PLEASE DO NOT USE IN HIGH WINDS

Putting Awning In

Pack the ground mat back away, remove pegs and place back in the boot.

Turn the knob to push back the extended legs, and clip back in place.

Use the pole with the hook located on the end of the boot, to wind the awning back into place.

BOOT



Boot

The boot is where you store all your stuff while travelling, you can access this from the outside using the key or inside using the sliding doors.

The bottom bunk slates will fold up and attach in place to provide more space.

Once the boot is emptied to the bed height you will be able to drop the slats down and make the bunk up for sleeping on.

The internal doors to the boot must be slid back to ensure the slats from down fully.



Follow us on... 🔘 灯

FRONT CAB



Follow us on... 🔘 灯

Window Covers

Use the window covers (silver) and the front blinds to block out sun light when sleeping or a hot day to keep the motorhome cool.

The blinds can be pulled together, there is a magnet that will keep them in place. The silver side covers are attached by poppers.



There is a SAT NAV located in the driver's side door, the charger in the cab can be used to charge the sat nav or a cool box while travelling



 
GAS



Gas

Gas needs to be turned on at the regulator located on top of the gas bottle.

Switch to turn gas on inside the gas cabinet (located outside).



There is a gas and an electric kettle, this is located in a box under the left seat in the motorhome

A toaster (If an electric pitch) is located under the left seat in the motorhome.

X



CABIN CONTROL PANEL

heater



Pump Button. With the power on, press the pump button to turn the water pump on. Press the button again to turn the pump off. The adjacent LED will illuminate when the pump is on, and also the level of the water tank will be displayed on the water gauge.

View Levels. To display the battery voltage levels and the water tank levels on the control panel gauges, press the levels button. The display will remain illuminated for10 seconds. It is possible to lock the display 'on' to allow continuous display. This can be achieved by pressing and holding the view levels button for 2-3 seconds until you hear a beep. To turn this locked feature off, either press and hold the view levels button again for 2-3 seconds or turn the power off and back on

Battery Select. By default, the leisure battery is selected as the power source if no mains supply is present, or as the battery to be charged when the mains supply is available. To change thes elected battery, press the vehicle battery select button. The selected battery is indicated by LED adjacent to the caravan or car logo (for caravans) or the LED's situated to the front (vehicle) or rear (leisure) of the motorhome logo.

Mains on indication. When connected to a 230v supply the LED with a "lightning strike" shown will be illuminated.

Charging when the vehicle engine is running. When the vehicle engine is running both the vehicle battery and the leisure battery LED's will flash in unison to indicate that they are connected together and are being charged by the vehicle.


230V switches

Red Indicator - Reverse polarity indicator, lights up when the 230V supply polarity is reversed

Green push switch - Charger switch, this switch turns the 12V battery charger on or off. "In" is on "out" is off.

Amber push switch - Space heater switch, this switch turns the 230V supply to the space heater/ combination heater / central heating system on or off. "In" is on "out" is off.

Clear push switch - Water heater switch, this switch turns the 230V supply to the separate water heater on or off. "In" is on "out" is off. Note, if the vehicle contains a combined space & water heater then this button is not used.

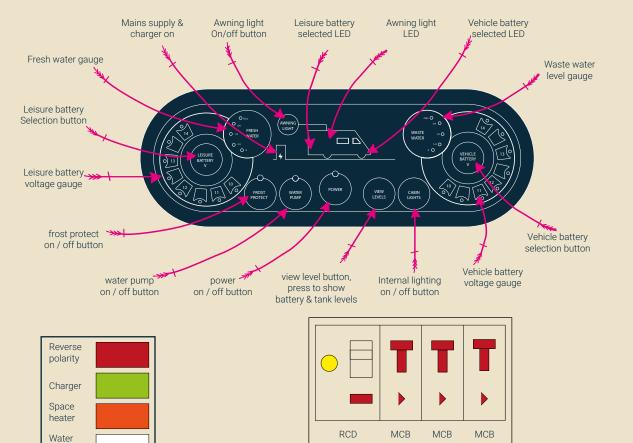

www.travelthewild.co.uk

Follow us on... (O) \$7

MAKING UP THE BEDS



Bed

Make sure that nothing in the boot is higher than the bed's bottom, and use the clip at the back to release it to raise and lower the bed securely.



X

Follow us on... 🔘 灯

HOW TO USE THE TV



TV instruction



- 1. Menu
- 2. settings
- 3. channel
- 4. Auto scan
- 5. Auto tuning
- 6. Press exit to see progress

Once followed these steps, the digital channels will tune in. Please check cables in the back are in correctly.

X

Follow us on... 🔘 灯

CONNECTING TO THE WIFI



Wi-Fi

EE Wi-Fi dongle located on the left side of seating area

Step 1. unplug Step 2. Connect device

Network: EE71-2BE8GB3

Password: wbrervhg








USB CHARGING POINTS



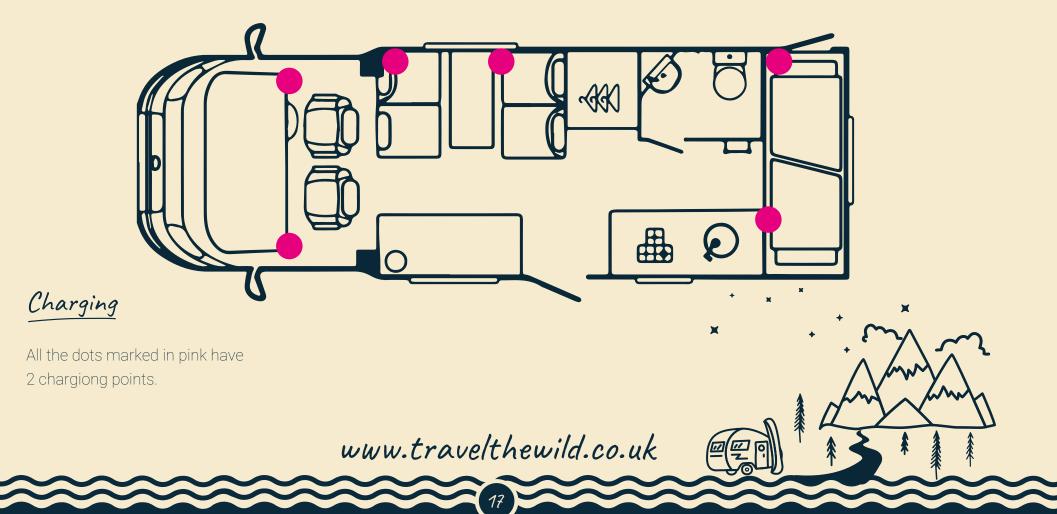





hello@travelthewild.co.uk 07834 812465